


QUICK START GUIDE

English

Before using this product, please read the safety precautions in the Operating Instructions.


Get connected

1 Connect the AC mains lead to this unit.

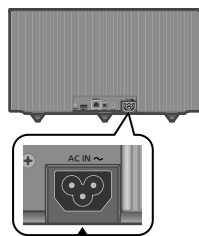

To a household mains socket

2 Press [⏻/⏻] to turn this unit on.

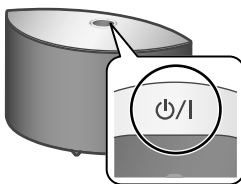

- “Wi-Fi Setup” starts blinking.

Wi-Fi Setup

3 Download and open the “Google Home” app on a smartphone or tablet.



- Connect your smartphone/tablet to the same network as this unit before setting.
- Set up SC-C50 / SC-C30 by following the on-screen instructions. For details, visit: <https://www.google.com/cast/setup/>

Enjoy music

Enjoy music streaming

You can cast music from hundreds of Chromecast-enabled audio apps: g.co/cast/apps

Enjoy music files and advanced features

Enjoy music files on your smartphone/tablet/music server and advanced features via “Technics Audio Center” App.

Technics



GET IT ON
Google Play



Download on the
App Store



- Google, Google Play, Google Home and Chromecast built-in are trademarks of Google LLC.
- The Google Assistant is not available in certain languages and countries.
- Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries.
- The operations and on-screen display items, etc. of the app “Technics Audio Center” are subject to change.
- For the latest information, visit: www.technics.com/support/
(Availability and performance of certain features, services and applications are device- and network-dependent and may not be available in all countries/regions; subscription(s) may be required, and additional terms, conditions and/or changes may apply.)